

SC-SE-I8-AM6-TO2

- 8 Digital Inputs
- 6 Analog inputs 4 - 20mA DC
- 2 Transistor outputs
- RS-485 communication
- Built in OLED Display



Expansions supported

LoRa communications
REYAX RYLR896



NB-IOT
BC95 module



Temperature
MAX31856



Analog
4-20mA / 0 - 10V



Load cell
HX-711



Main

Range of product	Smart Controls
Product type	Programmable Controller
Rated supply voltage	24V DC
Discrete input number	8 discrete input
Discrete output type	Relay and Transistor
Discrete output number	2 Transistor outputs
Discrete output voltage	24V DC for transistor output
Discrete output current	0.5A with T0.0... T0.1 Transistor 2 A with R0....R5
Communication	1 x RS-485
OLED Display protocol	I2C


Complementary

Discrete IO number	16
Number of Expansions	-----
Supply voltage limits	20.4....28.8V
Inrush current	<=50A
Power consumption in W	32.6.....40.4 with all outputs ON
Discrete logic input	Sink or source
Discrete input voltage	24V
Discrete input voltage type	DC
Voltage state 1 guaranteed	>=15 V for input
Voltage state 0 guaranteed	<=5 V for input
Discrete input current	5 mA for input
Input impedance	4.7k Ohm for input
Memory capacity	Refer datasheet of base micro-controller
Battery type	-----
Backup time	-----
Local signalling	1 LED green for PWR 8 LED green for I0.....I7 2 LED green for T0....T1
Electrical connection	Removable screw terminal block for inputs and outputs (pitch 5.08 mm)
Mounting support	Top hat type TH35-15 rail conforming to IEC 60715 Top hat type TH35-7.5 rail conforming to IEC 60715 Plate or panel with fixing kit
Height	90.50 mm
Depth	56.60 mm
Width	60.60 mm
Product weight	0.43 Kg



Environment

Resistance to electrostatic discharge	4kV on contact 8kV on air
Resistance to electro magnetic fields	10 V/m (80 MHz 1GHz) 3 V/m (1.4 MHz 2 GHz) 1 V/m (2 MHz 3 GHz)
Immunity to microbreaks	10 ms
Relative humidity	10....95% without condensation in operation
IP degree of protection	IP20
Operating altitude	0...2000m
Storage altitude	0...3000m
Shock resistance	15 gn for 11 ms

Digital inputs wiring diagram

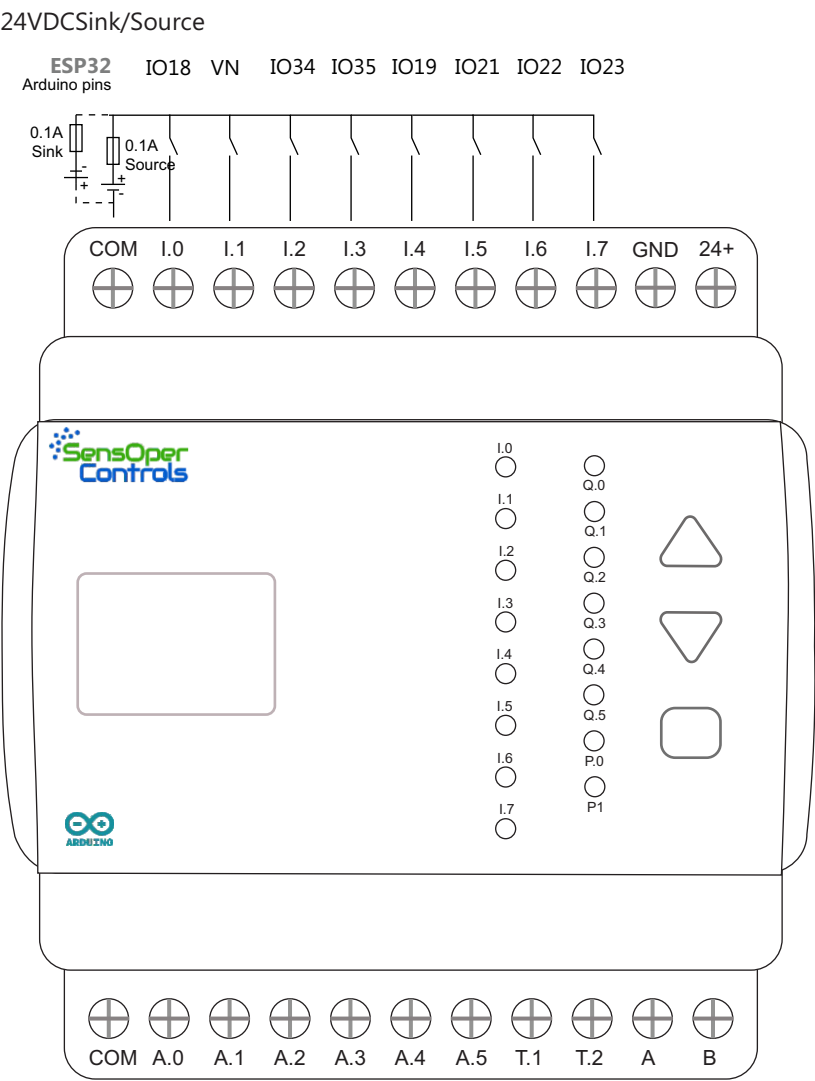


Relay and Transistor outputs wiring diagram

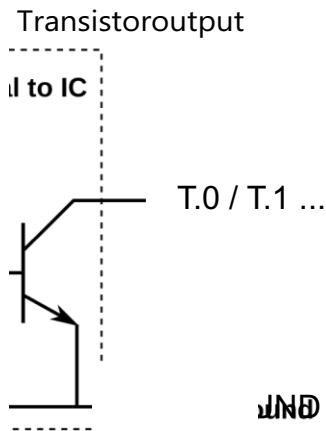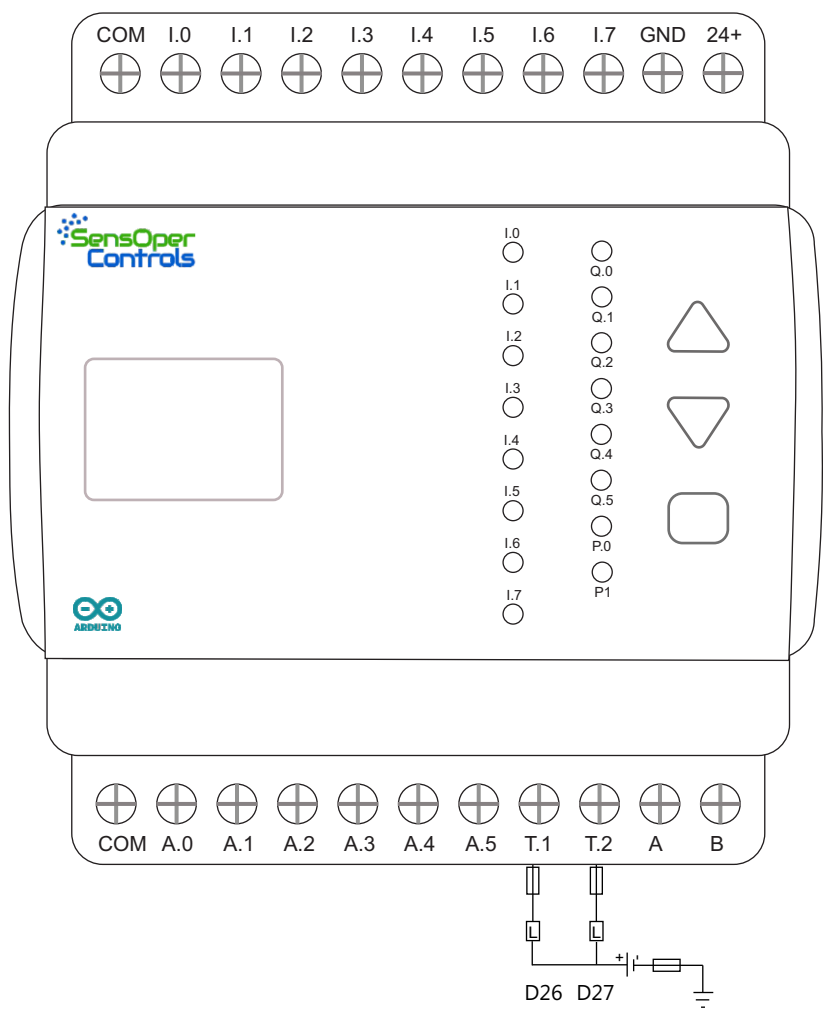


RS-485 communication wiring diagram

Driver	MAX485	
UART Connection	IO3 - RXD	IO1 - TXD
Flow Control	IO4	

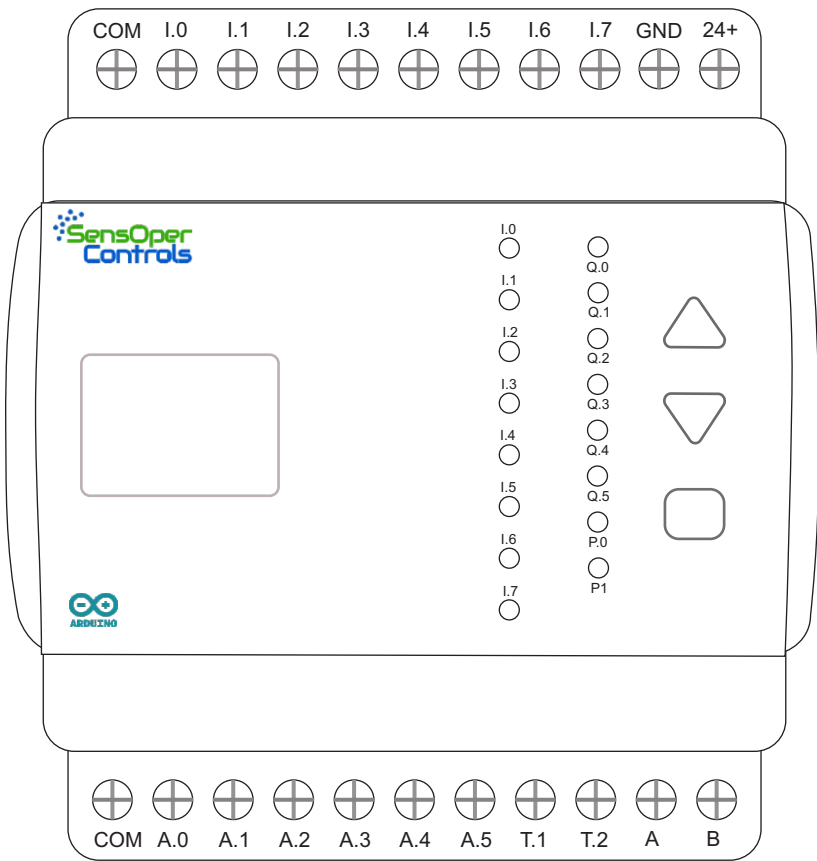


HALF-DUPLEX
Flow control
Arduino pin D26

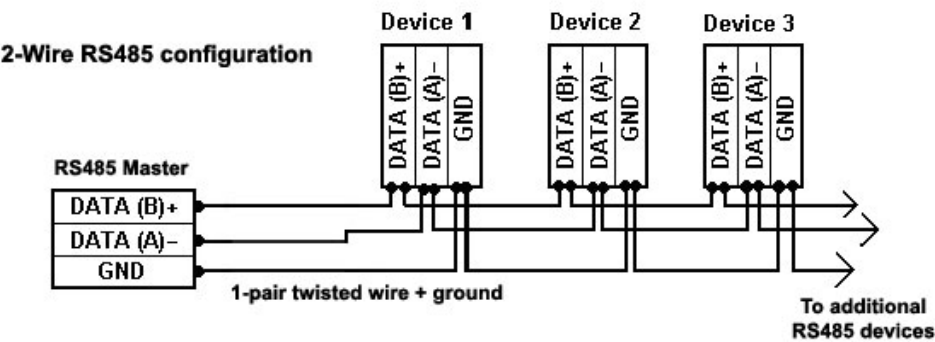

Analog input wiring diagram (4-20mA)


*AE-02 / AE-03 Models Only

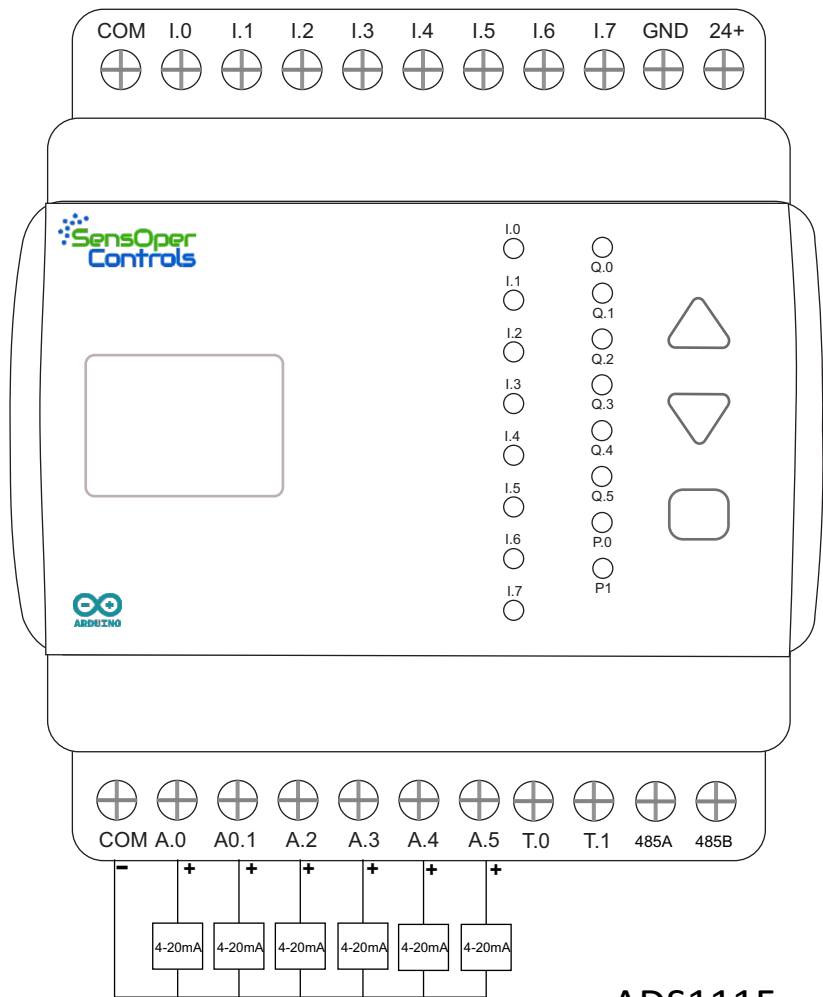


ADS1115 connections

IC Type	ADS 1115
Communication	I2C IO16 - IO17
Module Address	0x48 / 0x49
Resolution	16 bit


0 - 10 V input to 0 - 4V

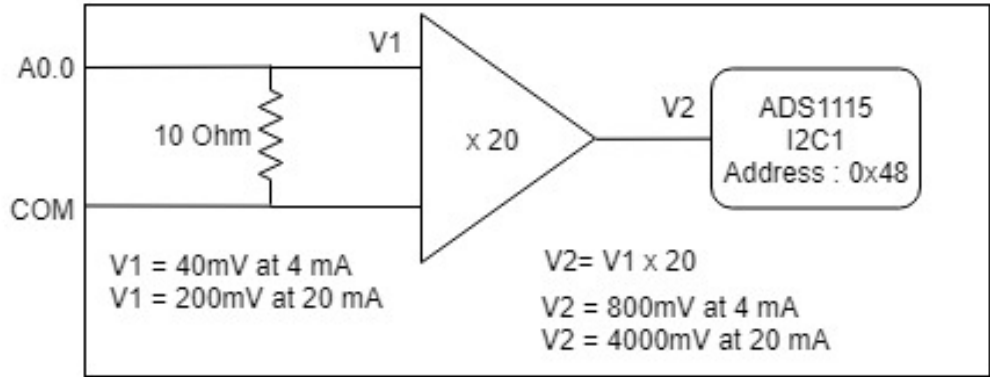

Expansion port

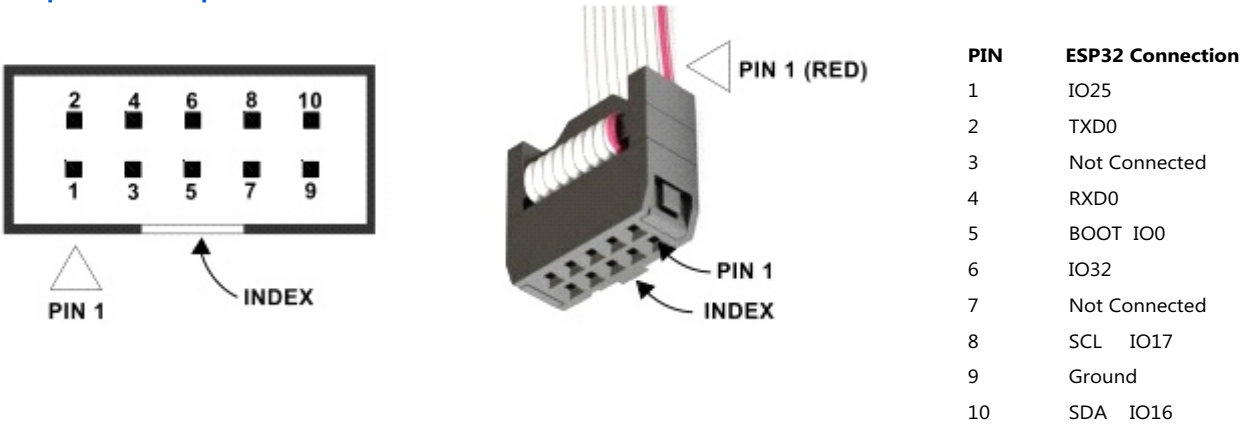

Expansion modules

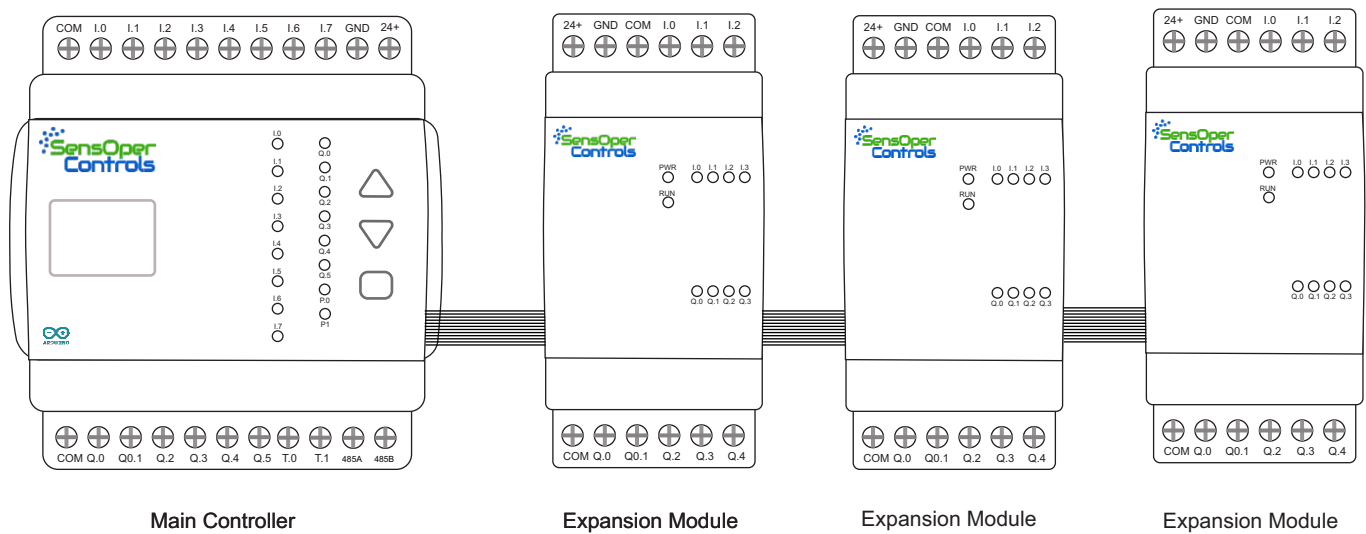

- Expansion modules connects to the right side of the controller
- Upto 6 expansion modules can be connected on one controller
- Expansion modules use I2C, UART and GPIO on the expansion port
- Depending on the model, some expansion modules require external power



LoRa communications
REYAX RYLR896



NB-IOT
BC95 module



Temperature
MAX31856



Analog
4-20mA / 0 - 10V



Load cell
HX-711



TFT Display parameters

Display driver	ST7789			
Communication	SPI IO18/IO19/IO23 SCK/MISO/MOSI			
Module Address	NA			
Resolution	80 x 160			
Connection	TFT_SCK	IO18	TFT_RST	IO32
	TFT_MOSI	IO23	TFT_DC	IO13
	TFT_CS	IO27		



0.96 OLED Display parameters

Display driver	SSD1306		
Communication	I2C	IO16(SDA) - IO17(SCL)	
Module Address	0x3C		
Resolution	128 x 64		


Built in but ons

Read mode	ADC (Analog to Digital Conversion)			
Analog IO	GPIO32			

Voltage levels

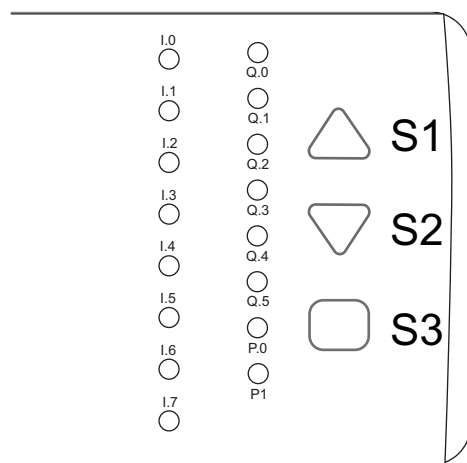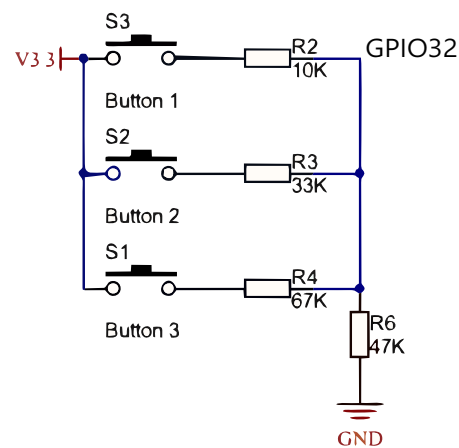


Programming procedure

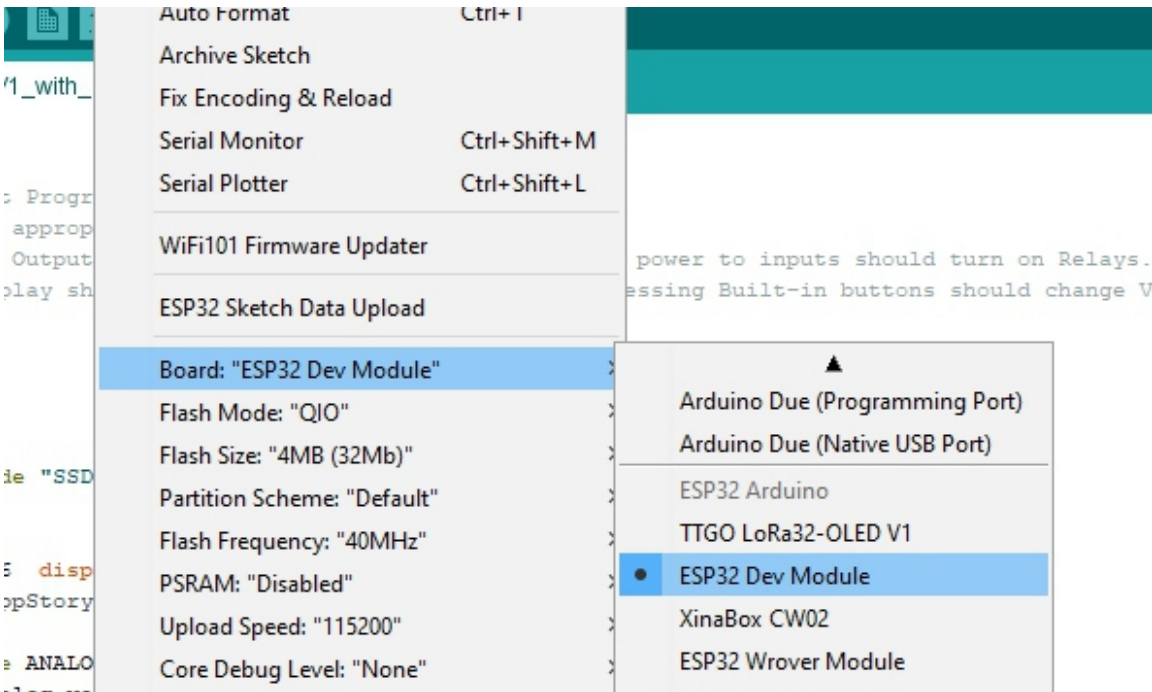

Board	ESP32 Dev Module
Flash Mode	QIO
Flash Size	4MB
Flash Frequency	10MHz
PSRAM	Disabled
Upload Speed	115200

After successful uploading of program following message appears.

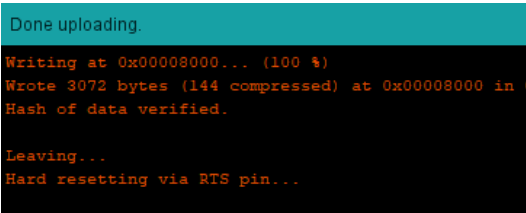

esp32 Boards must be installed under board manager, it is recommended to use the latest version of esp32 board driver for Arduino.

Due to installation of different drivers and older versions of libraries, Arduino fails to upload the program to the controller. In most cases it is due to failure to enter boot mode of the device.

The device can be forced to boot mode by connecting the BOOT IO0 of the expansion port to the GND pin with a jumper wire. Arduino is able to upload the program to controller while the controller is in boot mode.

After uploading the program , the connection between the BOOT IO0 and GND must be removed to run the uploaded program.



Reach-Us

Technical Support

E-mail : support@sensoper.com

Sales Inquiries

E-mail : sales@sensoper.com

Web : <https://www.sensoper.com/support/>

Order Online

<https://www.sensoper.com>